

## Connecting LAN interface

1. Connect the opentherm lan-interface LAN to your network
2. Go with your web browser to "192.168.0.254" (set a static IP on your PC, like 192.168.0.1)
3. The default username and password is root/root

## Setup a fixed ip-address

1. Go to "network" -> "Interfaces" and click on "edit"
2. Enter your IP settings and don't forget to enable "Disable DHCP for this interface".
3. Click "Save & Apply"

## Join a WIFI network

1. Go to "network" -> "Wi-Fi". Make sure the interface is enabled. Then click on "edit"
2. Find your Wi-Fi network in the list and click "Join network"
3. Enter the matching values of the access point connecting to. Especially: Mode: client, Wi-Fi channel, ESSID and encryption (second tab).
4. Click "Save & Apply".
5. When the settings are correct, the AP will connect to your access point as a client.

**Make sure you use different IP ranges for the LAN and WLAN interface. Otherwise the gateway does not understand how to reach the correct network!**

## Connecting to Opentherm Gateway

To connect to the Opentherm Gateway, you can reach it by its IP-address at port 1001.  
With otmonitor.exe, go to "Options" -> "Interface" and enter "ipaddress:1001" and click "ok".